

# RioVOLT™

## Getting Started

First Edition, March, 2001

Part Number 41000571-002

### How to Start:

1. Unpack the RioVolt and all of its components.
2. Plug the **AC Adapter** (included) into the **Power Port**  
**OR**  
Remove the **Battery Door** and insert **2 AA Alkaline batteries** (included) and replace the **Battery Door**.
3. Plug the **8 Function Remote Control** into the **Headphones & Remote Port**.
4. Plug the **Headphones** into the **Remote Control**.
5. Slide **Release Latch** to open the RioVolt.
6. Insert a music or digital audio CD into the RioVolt.
7. Snap lid shut.
8. Press and hold the **Play/Pause** button on the **Joypad** to turn the RioVolt on.

**NOTE: If the RioVolt display does not light up and the unit demonstrates no activity, check the Hold Switch on the RioVolt and on the Remote Control to make sure they are in the OFF position.**

### Important Hints:

- The **Battery Indicator** will appear in the upper corner of the display when battery life has diminished to approximately 20 percent or less.
- As your RioVolt is firmware upgradeable, you should occasionally check our website at **www.riohome.com** for upgrades to both the firmware and your RioVolt User Guide.
- For more indepth information on the features and usage of your new RioVolt, be sure to check the electronic **RioVolt User Guide** available on the **RioVolt Installation CD**.

- Prog.**  
Refer to the manual for instructions on this feature.
- +10**  
Skip 10 tracks ahead
- Mode**
- |                |   |
|----------------|---|
| <b>1</b>       | Repeat Current Song   |
| <b>All D</b>   | Repeat All Songs in Directory   |
| <b>All S</b>   | Repeat All Songs on CD Shuffle CD                                       |
| <b>1 S</b>     | Repeat selected song or select a random song if Fast Forward is pressed |
| <b>All S D</b> | Shuffle/Repeat All Songs in Directory                                   |
| <b>All S</b>   | Shuffle/Repeat All Songs on CD  |
| <b>I</b>       | Return to first track, Cycle through Intros                             |

- EQ**  
Press to cycle through:  
(1) Normal, (2) Rock, (3) Jazz, (4) Classical, or (5) Ultra Bass


- OR**  
Press and hold for 1.5 seconds for **Menu Mode**. Press the **Joypad** to make changes and selections.
- Fast Forward** ⏭ Next Menu/Select
- Rewind** ⏮ Go Back/Exit
- Play/Pause** ⏸ Toggles options (On/Off, 1x/2x, etc.)
- Stop** ■ Escape Menu Mode.
1. **RESUME** - When enabled, return to the same settings, file, and time (on same CD) after stopping or powering off RioVolt.
  2. **SPEED SCAN** - Controls the speed at which you can scan through directories. (1x, 2x, 4x, 6x)
  3. **BEEP control** - When enabled, pushing certain buttons will produce audible beeps.
  4. **LIGHT control** (backlight) - Controls whether the backlight remains on or turns off when connected to an external power adapter.
  5. **EXT control** - Controls whether file extensions (MP3, WMA, CD, & ASF) are displayed.
  6. **TAG control** - Controls whether ID3 tag information is displayed.




- Volume Bar**  
- Decrease  
+ Increase

- Navi**  
Press once to access directories on CD. Press the **Joypad** to scroll through directories and to make selections.
- Fast Forward** ⏭ Next Menu/Select
- Rewind** ⏮ Go Back/Exit
- Play/Pause** ⏸ Move Up
- Stop** ■ Move Down

### Hold Switch

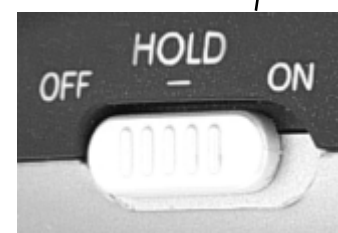

**NOTE: The Hold Switch does not power the RioVolt on and off.**  
**ON** - Locks buttons so the unit can not be activated.  
**OFF** - Unlocks buttons.

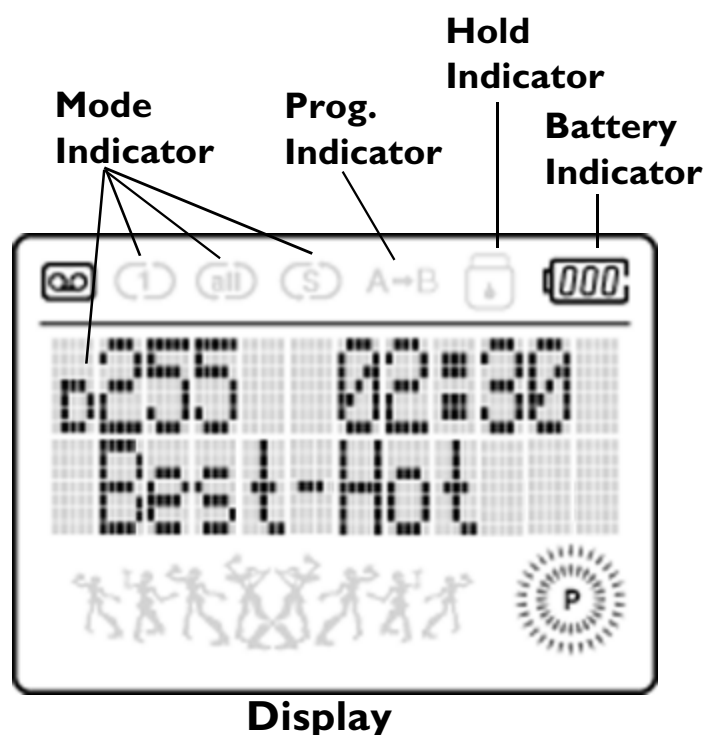

Display

### Joypad

- Play/Pause** ⏸  
Press to play or to pause.  
Press and hold to turn on.

- Fast Forward** ⏭  
Press to go to next track.  
Press and hold to fastforward through current track.

- Rewind** ⏮  
Press to return to previous track.  
Press and hold to rewind through current track.

- Stop** ■  
Press to stop.  
Press and hold to turn off.

Refer to EQ and Navi functions for additional uses.

